

## I Technical Specifications:

Item Code: UV PRO400

Name: PROJECTION LIGHT

Voltage: AC 24V, 50Hz

Bulb: 240V 400W E40 MERCURIC BULB

Fuse: 250V/5A Weight: 8.0kg

Size: L440 x W295 x H170mm

### **II Operational Instructions:**

1. Unpack the carton to check if there is any damaged or missing parts when you receive the unit, call the local dealer if anything is found not in a normal condition.

- 2. Open the cover and install the lamp. Keep the lamp untouched by bare finger and disconnect the unit from power while re-lamping.
- 3. Use a clamp to hang the unit onto the truss fasten tight. Tie the unit steadily onto the truss by winding a chain through the bracket of the unit.
- 4. Use for indoor only.
- 5. Place the unit where there is efficient ventilation, away from any flammable and explosive objects.
- 6. Check that the rated power corresponds to the main supply.

# III Re-lamping:


- 1. Unplug the fixture completely fr15 minutes for cooling.
- 2. Unscrew the fixing screws of the
- 3. Taking the lamp out of the unit b
- 4. Place the new lamp into the unit

#### **IV Caution:**

- In order to reach a maximum should be carefully read and ob
- 2. Ambient temperature should no
- 3. Disconnect from the power sup of the lamp and fuse. Please replacement!
- 4. To avoid electrical shock, do unit is activated.
- Call professionals for mainten with the unit. Always comple electric and allow to cool for lamp or fuse
- 6. These units are for conuser-serviceable parts inside. qualified service person.
- The lamp shall be changed if it deformed.

- 8. Please be sure to mount luminaries only as shown on the picture below, means hanging on the bracket; Additionally, you can use a stable base for the fixing of the luminaries.
- 9. Please ask an approved electrician because of special national requirements for Electrical installation. No operation without proof by skilled electrician in public area!
- 10. No naked flame sources, such as lighted candle, should be placed on the apparatus,.
- 11. The use of apparatus should be in moderate climate.
- 12. The apparatus should not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

#### V Installation:

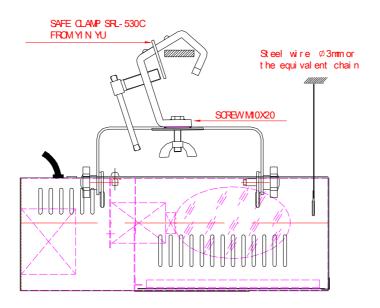

http://acctec h.ru/cat/ultra fiolet\_lamps/